

# Oils

... FOR HIRAM FLORING

## TOOLS


- \_\_\_Wide brush or oil paint roller
- \_\_\_Plastic bucket
- \_\_\_Polishing machine,  
beige and white pad

## GENERAL


Hiram's solvent-based oil gives a wood floor a pleasant non-slip and water-resistant finish, which is also easy to clean and upkeep. The oil has a dry mass of >90% and is suitable for basic machine-oiling of untreated, new or freshly sanded floors. You will find information on Hiram's oil with raw timber effect at the end of this page.

## SAFETY NOTICE!

Oil soaked cloths and possible sanding dust may ignite spontaneously. It is therefore important to immerse these in water or retain until disposal in a tightly sealed container.

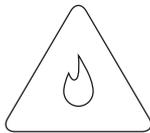

## PROCEDURE

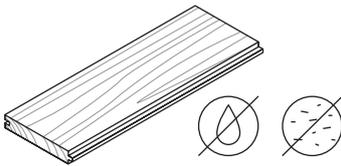

The wood must have been recently sanded, with sandpaper grit of at least 100-120. Room and floor temperature should be 15-30°C. If before oiling the floorboards have stubborn dirt on them, we recommend using an intensive cleaner. During application and drying time of approx. 8 hours, make sure the area is well ventilated.

Shake the canister with the oil carefully before and during use. If you have canisters with different batch numbers, mix them in order to avoid variations in colour. Apply the oil evenly with a short-pile roller before allowing to soak in for approx. 10-15 minutes. If the oil soaks up quickly, put on more.

Polish the oil into the wood until the floor appears saturated. Use a polishing machine with a white or beige pad. Remove excess oil with dry lint-free cotton cloths, until the surface no longer looks wet. For an extra finish and greater robustness the floor can be polished again with 1 dl of oil per 10 m<sup>2</sup>. This must be done within 6-12 hours, or at latest on the following day, after the initial application. You can tread with care on the floor after 24 hours. Do not use anything damp on the floor in the first 3-5 days while the oil is hardening. Usage 20 – 25 m<sup>2</sup>/L

## HIRAM OIL WITH RAW TIMBER EFFECT

Water-based, usage approx. 40 – 60 g/m<sup>2</sup> per application, 3 applications necessary. Roll the raw timber oil on evenly following the direction of the grain using an oil roller. Let it dry for approx. 1 hour, smooth it with a pad, repeat the process x2 in total.